


Setting Up Your Sag Indicator (Meet Your New Travel Companion)

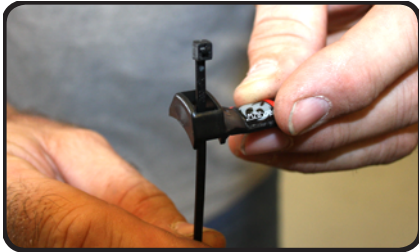

1

- Insert the supplied zip tie into your Sag Indicator, making sure the head of the zip tie is facing outward.



2

- Place the Sag Indicator above the bottom collar of the shock body.
- Tightly pull zip tie tail until indicator is tightly secured to shock before cutting excess.
- Cut excess zip tie.



3

- The Sag Indicator will rotate around the shock body if it is properly installed. Use your Suspension Set Up Guide (provided separately) to ensure proper sag.



4

- You will know you've achieved proper sag when the rubber gasket aligns perfectly with the red line on the Sag Indicator (A).



You **MUST** rotate the Sag Indicator to the bottom of the shock body before riding! (B) Otherwise you risk breaking and losing the Sag Indicator.

