


Shock Installation Instructions



Step 1. Grease shock spacer (both sides)

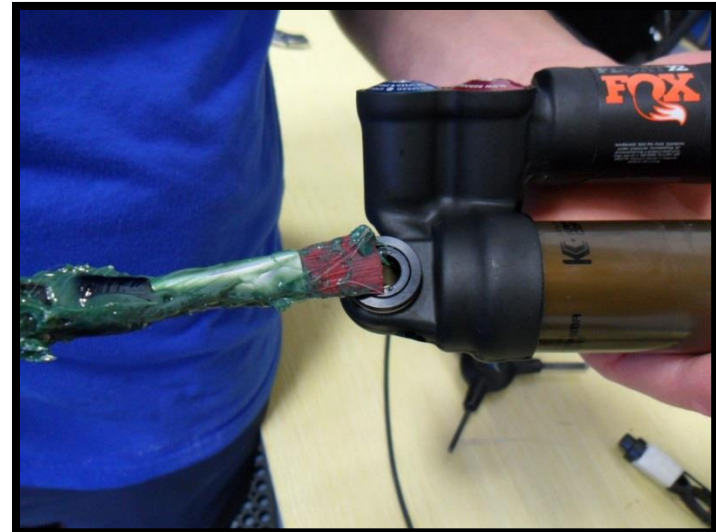

Step 1. Grease shock spacer (both sides)



Step 2. Grease shock eyelet (inside)



Step 2. Grease shock eyelet (outside)

Shock Installation Instructions

PHOENIX^{DH}
CARBON



Step 3. Grease front shock bolt.



Step 4. Grease clevis shock bolt.



Step 5. Install clevis shock bolt first.



Step 6. Install front of shock over shock tabs.

Shock Installation Instructions



Step 7. Install front shock bolt



Step 8. Torque clevis shock bolt to 24 Nm.



Step 9. Torque front shock bolt to 13 Nm.



Step 10. Finished