


**MACH 4 CARBON SL**

NUMBER	PART NAME	DESCRIPTION	Torque	*
3	FP-RDH-TA-12MM-BLK-V3	Rear Derailleur Hanger 12mm TA		
4	FP-SCW-SCK-M5*10	M5x10 Rear Derailleur Hanger Screw	7 Nm (5 lb-ft)	○
5	FP-LNK-UL-51MM-V1-R1	51mm Upper Link		
6	FP-LNK-LL-BLK-V3-R1	34mm Out-to-Out Lower Link		
7	FP-BRG-6902-LLUMAXECN	28mm 6902 Ext'd Max-E Bearing	**	
8	FP-BRG-6900-LLUMAXE	22mm 6900 Ext'd Max-E Bearing	**	○
9	FP-BLT-M14*20-BLK-V2	M14x20 Lower Link Bolt	35 Nm (27 lb-ft)	□
10	FP-BLT-M10*18-BLK-V1	M10x18 Upper Link Bolt	13 Nm (10 lb-ft)	□
11	FP-BLT-M8*45.7-BLK-V1	M8 Front Shock Bolt for 30.1mm Shock Spacing	13 Nm (10 lb-ft)	□ ○
12	FP-CLM-MECH-FRM-V1	Internal Routing Cable Clamp		
13	FP-CVR-MECH-FRM-V2	Internal Routing Hole Cover		
14	FP-CLM-DUAL-FRM-V1	Internal Routing Dual Clamp		
15	FP-SCW-FLT-M3*10	M3x10 Cable Clamp Screw (Included w/ Clamp)		
16	FP-GDE-DI2-7*8*2.5*2.5	7x8mm Di2 Wire Guide		
17	FP-CVR-FLV-TT-V1-R1	Fox Live Cover Plate		
18	FP-WSH-FLV-CNTRLMT-V1-R1	Fox Live Controller Mount Spacer		
19	FP-CVR-FLV-ACC-V1-R1	Fox Live Accelerometer Cover		
20	FP-PLG-FLV-RL-V1-R1	Fox Remote Lockout Plug		
21	FP-CVR-DI2-DT-V1	Di2 Downtube Battery Holder		
22	FP-SCW-FLT-M5*16	M5x16 Di2 DT Battery Cover Screws (Included with cover)		
23	FP-PRO-4SLV1-CS-V1-R1	Mach 4 Carbon SL Chainstay Protector		
24	FP-PRO-4SLV1-SS-V1-R1	Mach 4 Carbon SL Seatstay Protector		
25	FP-PRO-4SLV1-UR-V1-R1	Mach 4 Carbon SL Upright Protector		
26	FP-PRO-4SLV1-DT-XS-M-V1-R1	Mach 4 Carbon SL Downtube Protector		
26	FP-PRO-4SLV1-DT-L-XL-V1-R1	Mach 4 Carbon SL Downtube Protector		
27	PIVOT WB BOLTS V2	M5x0.8x18 Zinc Plated Steel Water Bottle Bolts		
28	FP-PRO-34MM-LL-V2-R1	34mm Lower Link Protector		
99	157MM THROUGH AXLE V3	12x157mm Thru Axle w/ Washer		○

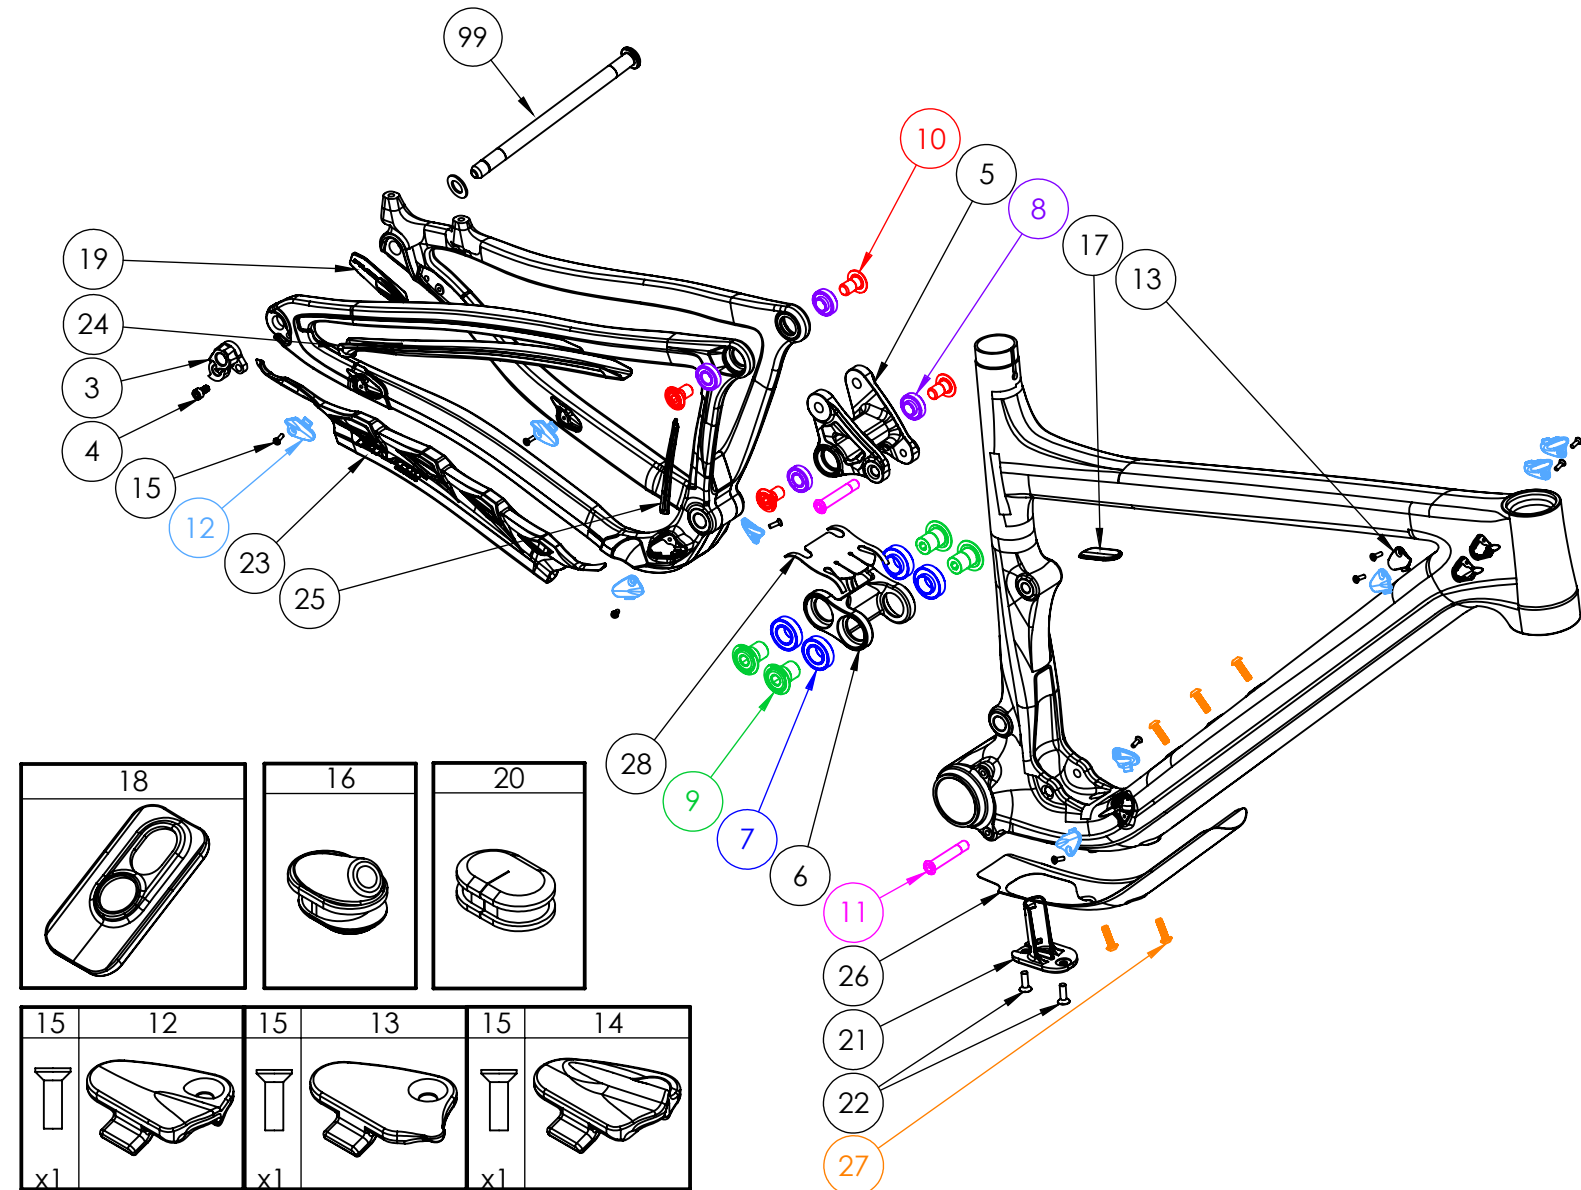

\*\* See Bearing Assembly Procedure located in the tech specs section at [www.pivotcycles.com](http://www.pivotcycles.com)

\* ○ = grease ● = anti-seize ◐ = anti-seize or grease □ = loctite 243